PARTS LIST

for

Whirlpool CORPORATION

30" GAS FREESTANDING RANGE SOLID STATE STANDARD CLEAN OVEN

MODEL SF310PEWW0

▲W—White, N—Almond

FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS

Whirlpool CORPORATION
Benton Harbor, Michigan.

© 1992 WHIRLPOOL CORPORATION

8-92 Litho in U.S.A.

Part No. 4320761
8-92

EXTERNAL OVEN PARTS

For Model: SF310PEWW0

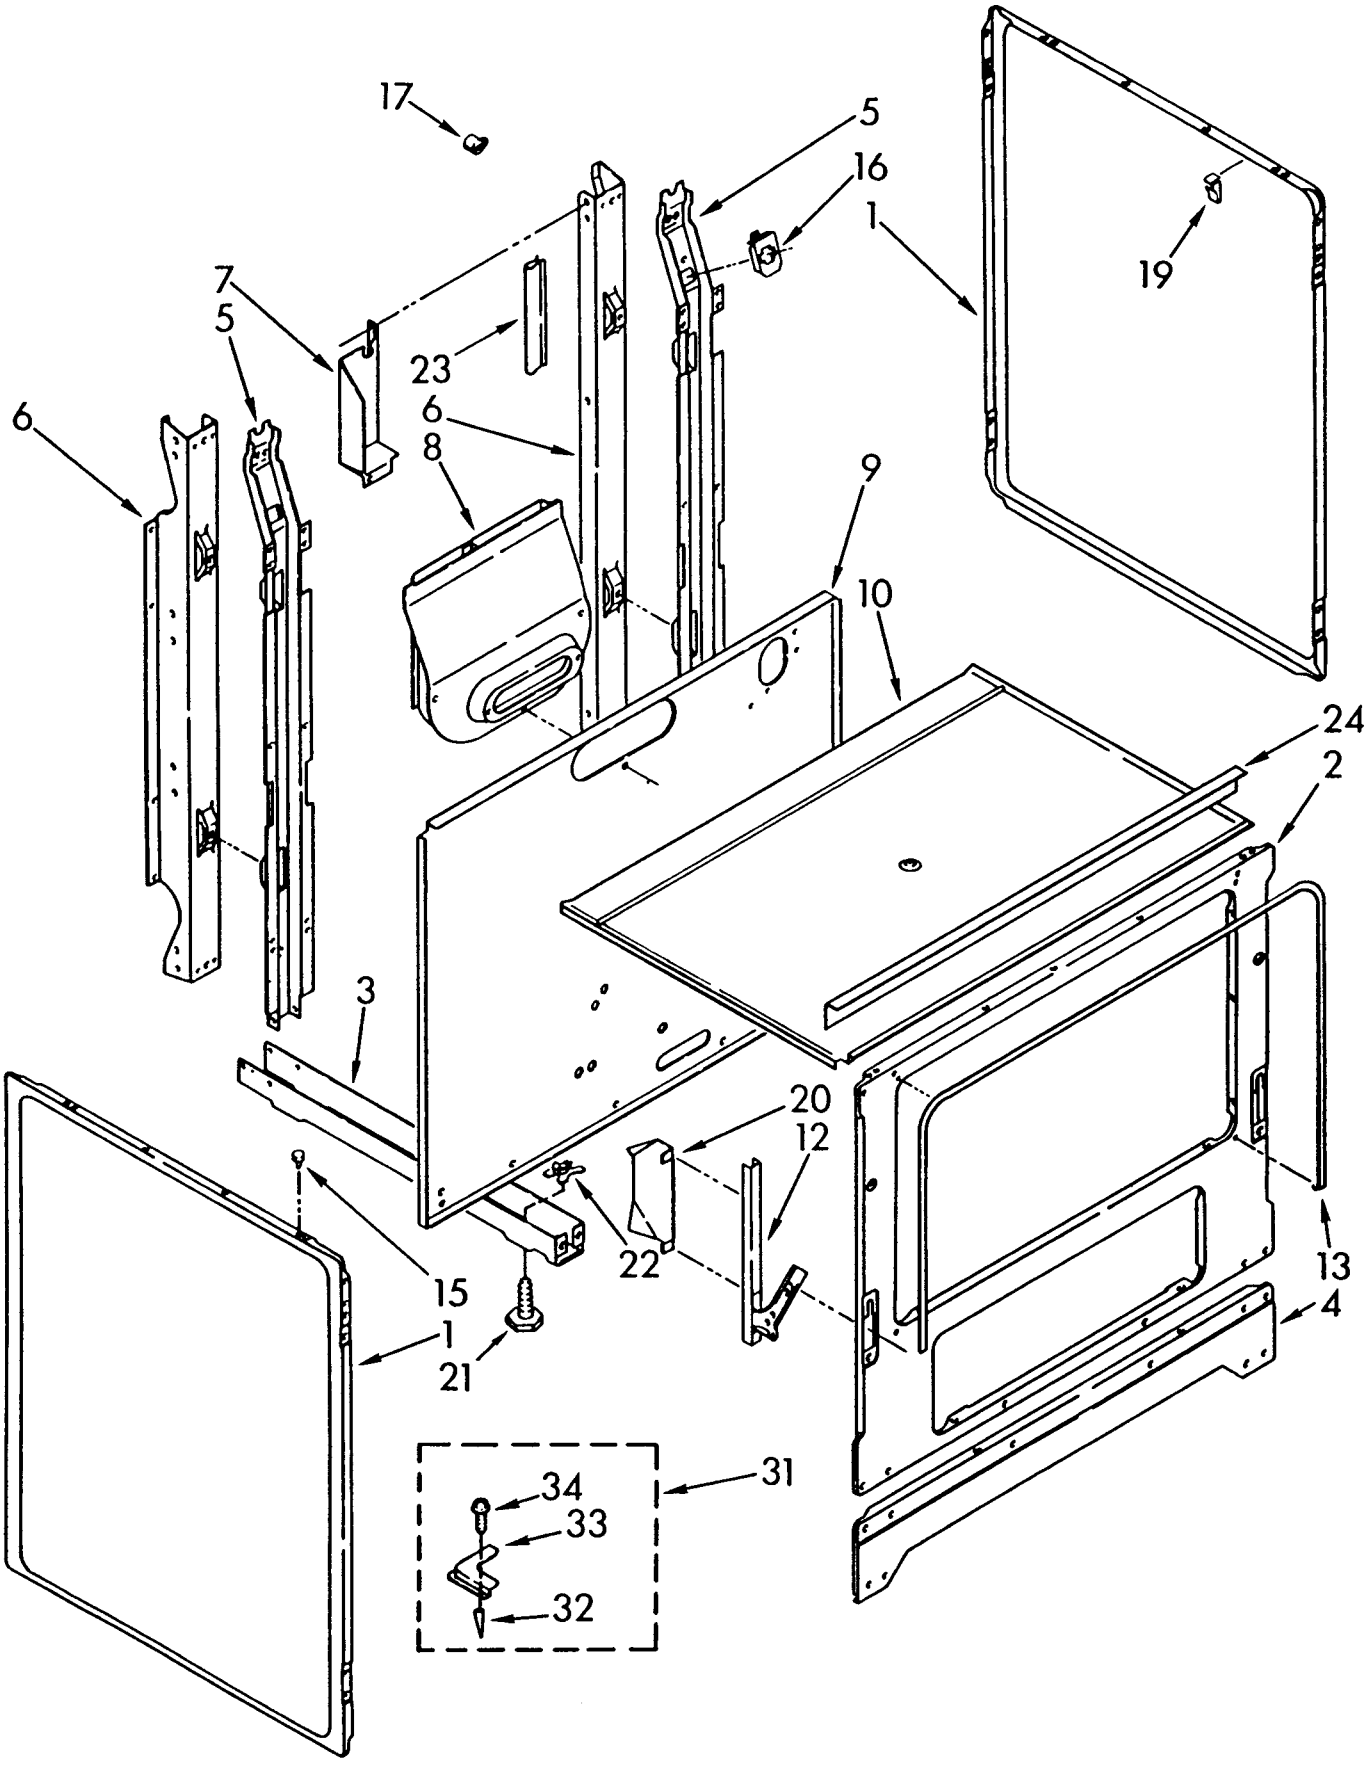

1		Panel, Side (2)
	4157000	White
	4157130	Almond
	4157111	Screw, 10-12 X 1/2 (10)
2	4320464	Frame, Front
	4157111	Screw, 10-12 X 1/2 (6)
3	4320525	Rail, Base (2)
4	4157006	Base, Front
	4315330	Screw, 8-18 X 1/2 (4) Black
5	4157011	Support, Main (2)
	4157111	Screw, 10-12 X 1/2 (12)
	4157123	Screw, 10-32 X 1/2 (1)
6	4315382	Support, Rear (2)
	4157111	Screw, 10-12 X 1/2 (6)
	4157114	Screw, 10-12 X 1/2 (4)
7	4157013	Cover, Wire
	4157121	Screw, 10-12 X 3/8 (2)
8	4157014	Flue, Box
	4157114	Screw, 10-12 X 1/2 (3)
9	4315380	Panel, Rear
	4157111	Screw, 10-12 X 1/2 (5)
10	4315080	Burner Box
	4157111	Screw, 10-12 X 1/2 (3)
11	4157021	Cord, Power
12	4320451	Hinge, Door (2)
	4157124	Screw, 10-24 X 3/8 (2)
	4157117	Screw, 10-12 X 1/2 (2)
13	4320463	Seal, Door (2)
15	4315408	Bumper, Cooktop (2)
16	4157129	Bracket, Receptacle
17	4157143	Strain Relief
19	4315726	Clip, Wire (2)
20	4157325	Shield, Insulation
21	4157161	Leg, Leveler (4)
22	4157332	Nut (4)
23	4157132	Safe Edge
24	4320479	Extension, Burner
	4320407	Screw
31	4315756	Anti Tip Kit
32	4315786	Anchor (2)
33	4315792	Bracket
34	4315778	Screw (2)

INTERNAL OVEN PARTS

For Model: SF310PEWW0

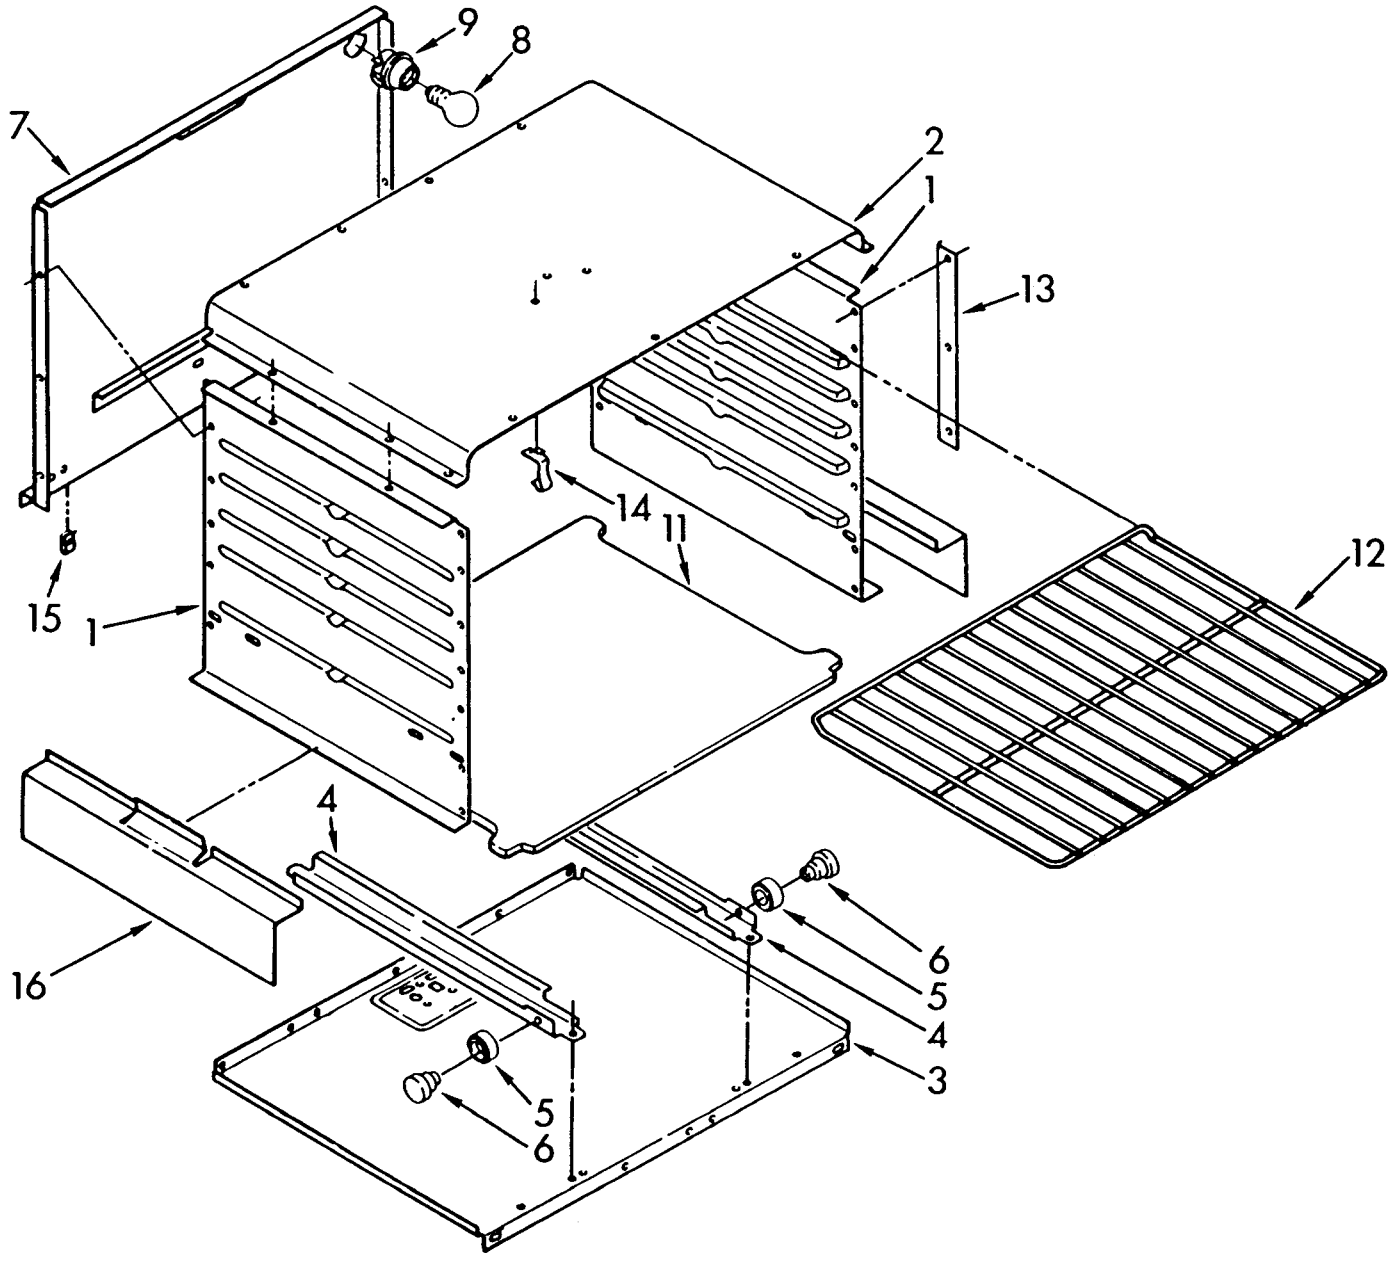

1	4315753	Liner, Oven Side (2)
	4315391	Screw, 10-12 X 1/2 (6)
2	4315045	Liner, Oven Top
	4157111	Screw, 10-12 X 1/2 (4)
3	4315389	Baffle, Bottom
4		Track, Broiler
	4315384	Left Hand
	4315385	Right Hand
	4157111	Screw, 10-12 X 1/2 (4)
5	4315388	Roller (2)
6	4315381	Pin, Roller (2)
7	4315054	Liner, Oven Back
	4157117	Screw, 10-12 X 1/2 (2)
8	4157019	Bulb
9	4157020	Receptacle, Light
11	4320462	Bottom, Oven
12	4315754	Rack, Oven (2)
13	4157328	Support, Liner (2)
14	4157329	Clip, Thermo Bulb
15	4157330	Clip, Speed
16	4315082	Shield, Radiation

BACKGUARD PARTS

For Model: SF310PEWW0

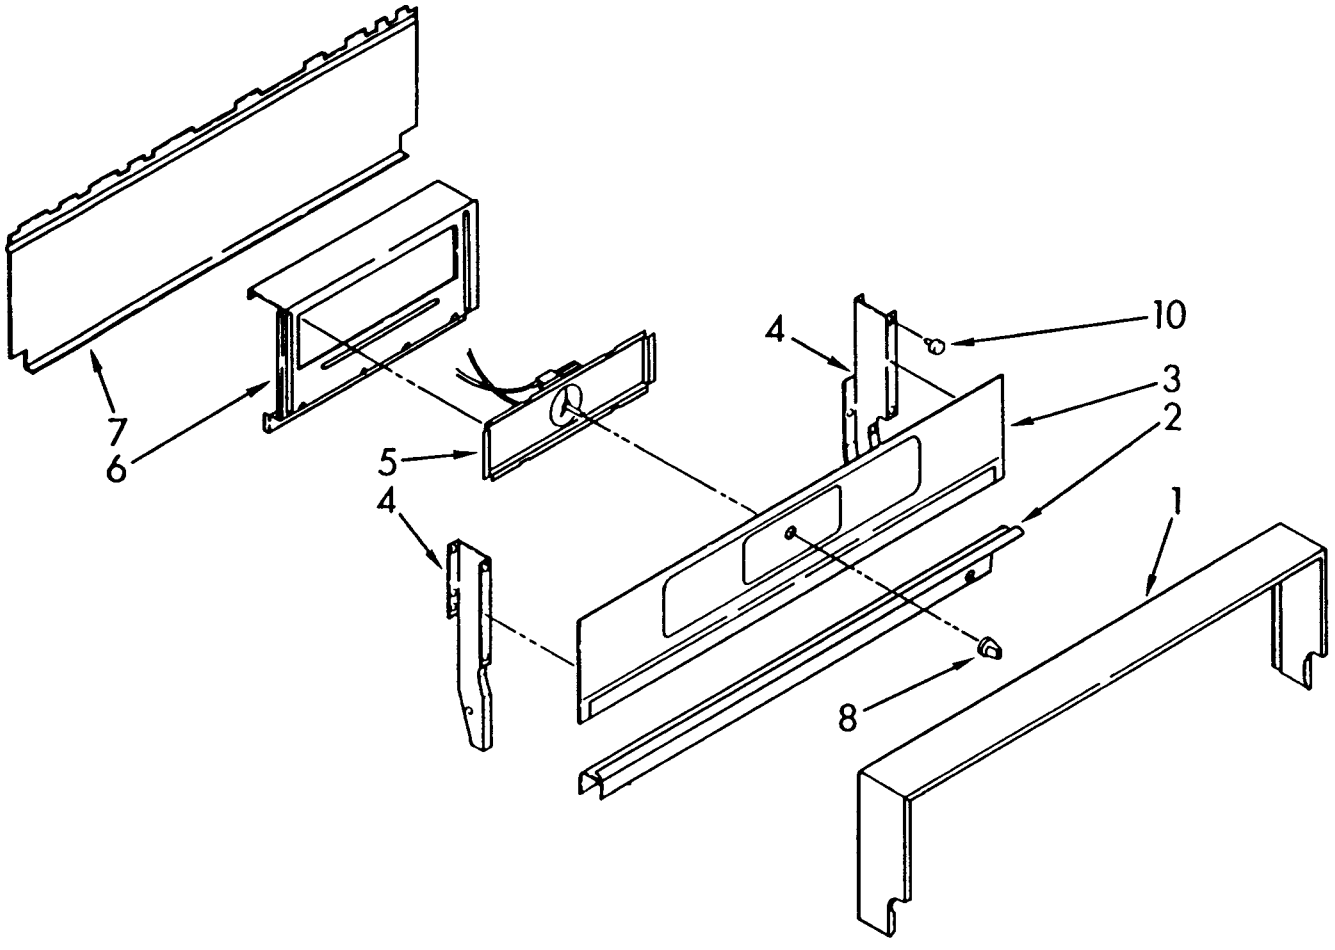

1	4320693	Frame
	4157121	Screw, 10-12 X 3/8 (6)
2	4315482	Bottom, Backguard
	4320575	Screw, 10-12 X 1/2 (4)
3	4320756	Glass
4		Support, Backguard
	4157166	Right Hand
	4157165	Left Hand
	4320577	Screw, 10-32 X 1/2 (1)
5	4320728	Clock
6	4179246	Bracket, Clock
7	4315348	Panel, Rear
	4157121	Screw, 10-12 X 3/8 (2)
8	786434	Knob, Clock
10	4157128	Bumper (4)

OVEN DOOR AND BROILER PARTS

For Model: SF310PEWW0

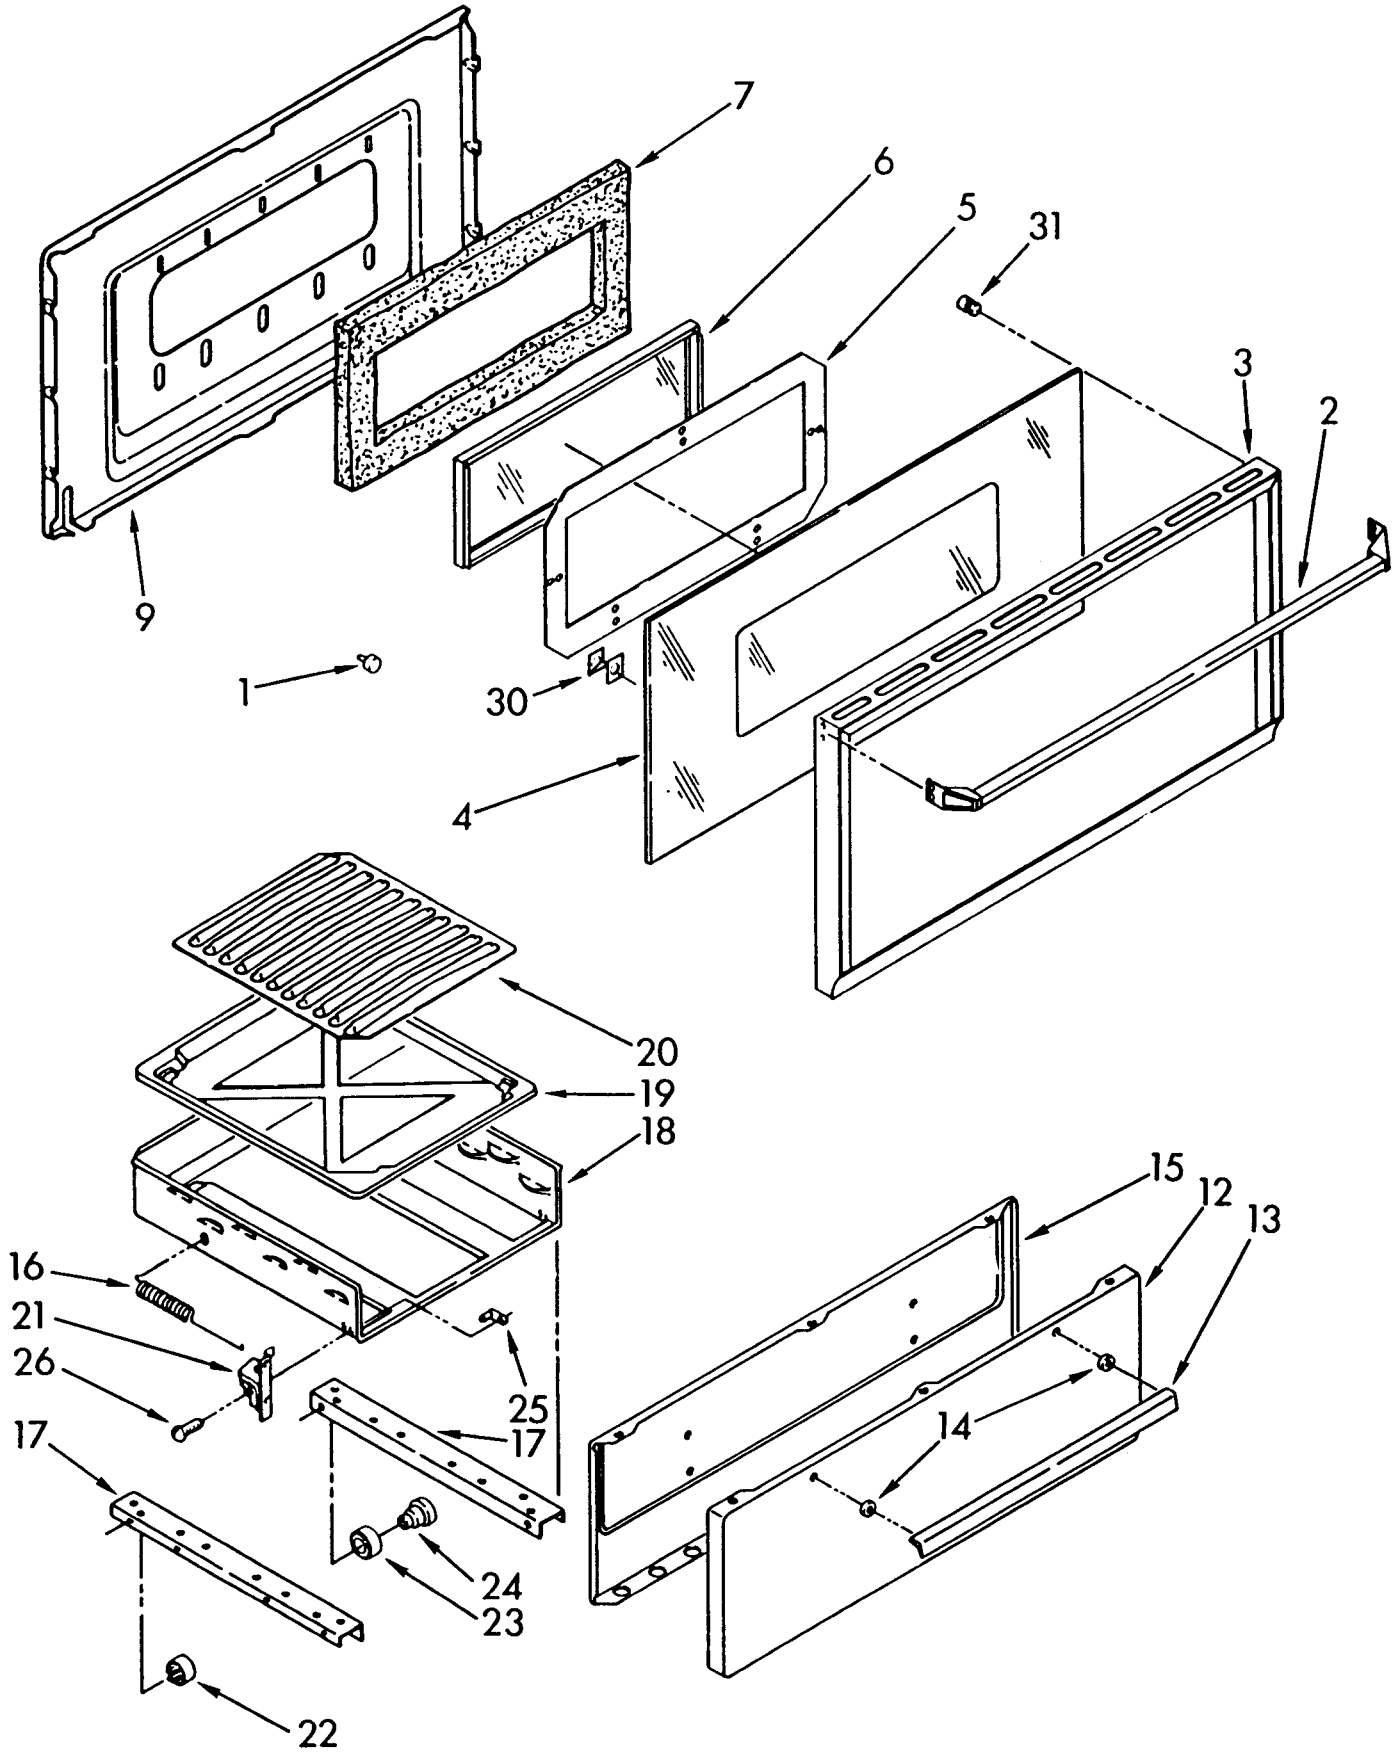

1	4157128	Bumper (4)
2	4157028	Handle, Door
	4157116	Screw, 8-18 X 3/8 (4)
3	4320578	Frame, Door
	4320742	Screw, 10-12 X 1/2 (6)
4	4320471	Glass
5	4320351	Ring, Hold Down
	4315391	Screw, 10-12 X 1/2 (6)
6	4157147	Window
7	4157033	Insulation
9	4320475	Liner, Door
12		Panel, Broiler
	4320457	White
	4320458	Almond
	4320742	Screw, 10-12 X 1/2 (5)
13	4157208	Handle, Broiler Door
	4320579	Screw, 10-12 X 5/8 (2)
14	4157041	Spacer (2)
15	4315621	Liner, Broiler Door
16	4157043	Spring (2)
17	4315383	Track, Upper (2)
	4315391	Screw, 10-12 X 1/2 (4)
18	4315088	Liner, Broiler
	4157117	Screw, 10-12 X 1/2 (4)
19	4315095	Pan, Broiler
20	4315094	Grid
21		Hinge, Door
	4157048	Right Hand
	4157049	Left Hand
	4157111	Screw, 10-12 X 1/2 (4)
	4157120	Screw, 10-24 X 3/8 (2)
22	4315387	Bumper, Nylon (4)
23	4315388	Roller (2)
24	4315381	Roller Pin (2)
25	4157053	Plate (2)
26	4157054	Screw (2)
30	4320536	Bracket "Z" (2)
	4315391	Screw (2)
31	4320477	Bumper, Rubber (2)

COOKTOP AND MANIFOLD PARTS

For Model: SF310PEWW0

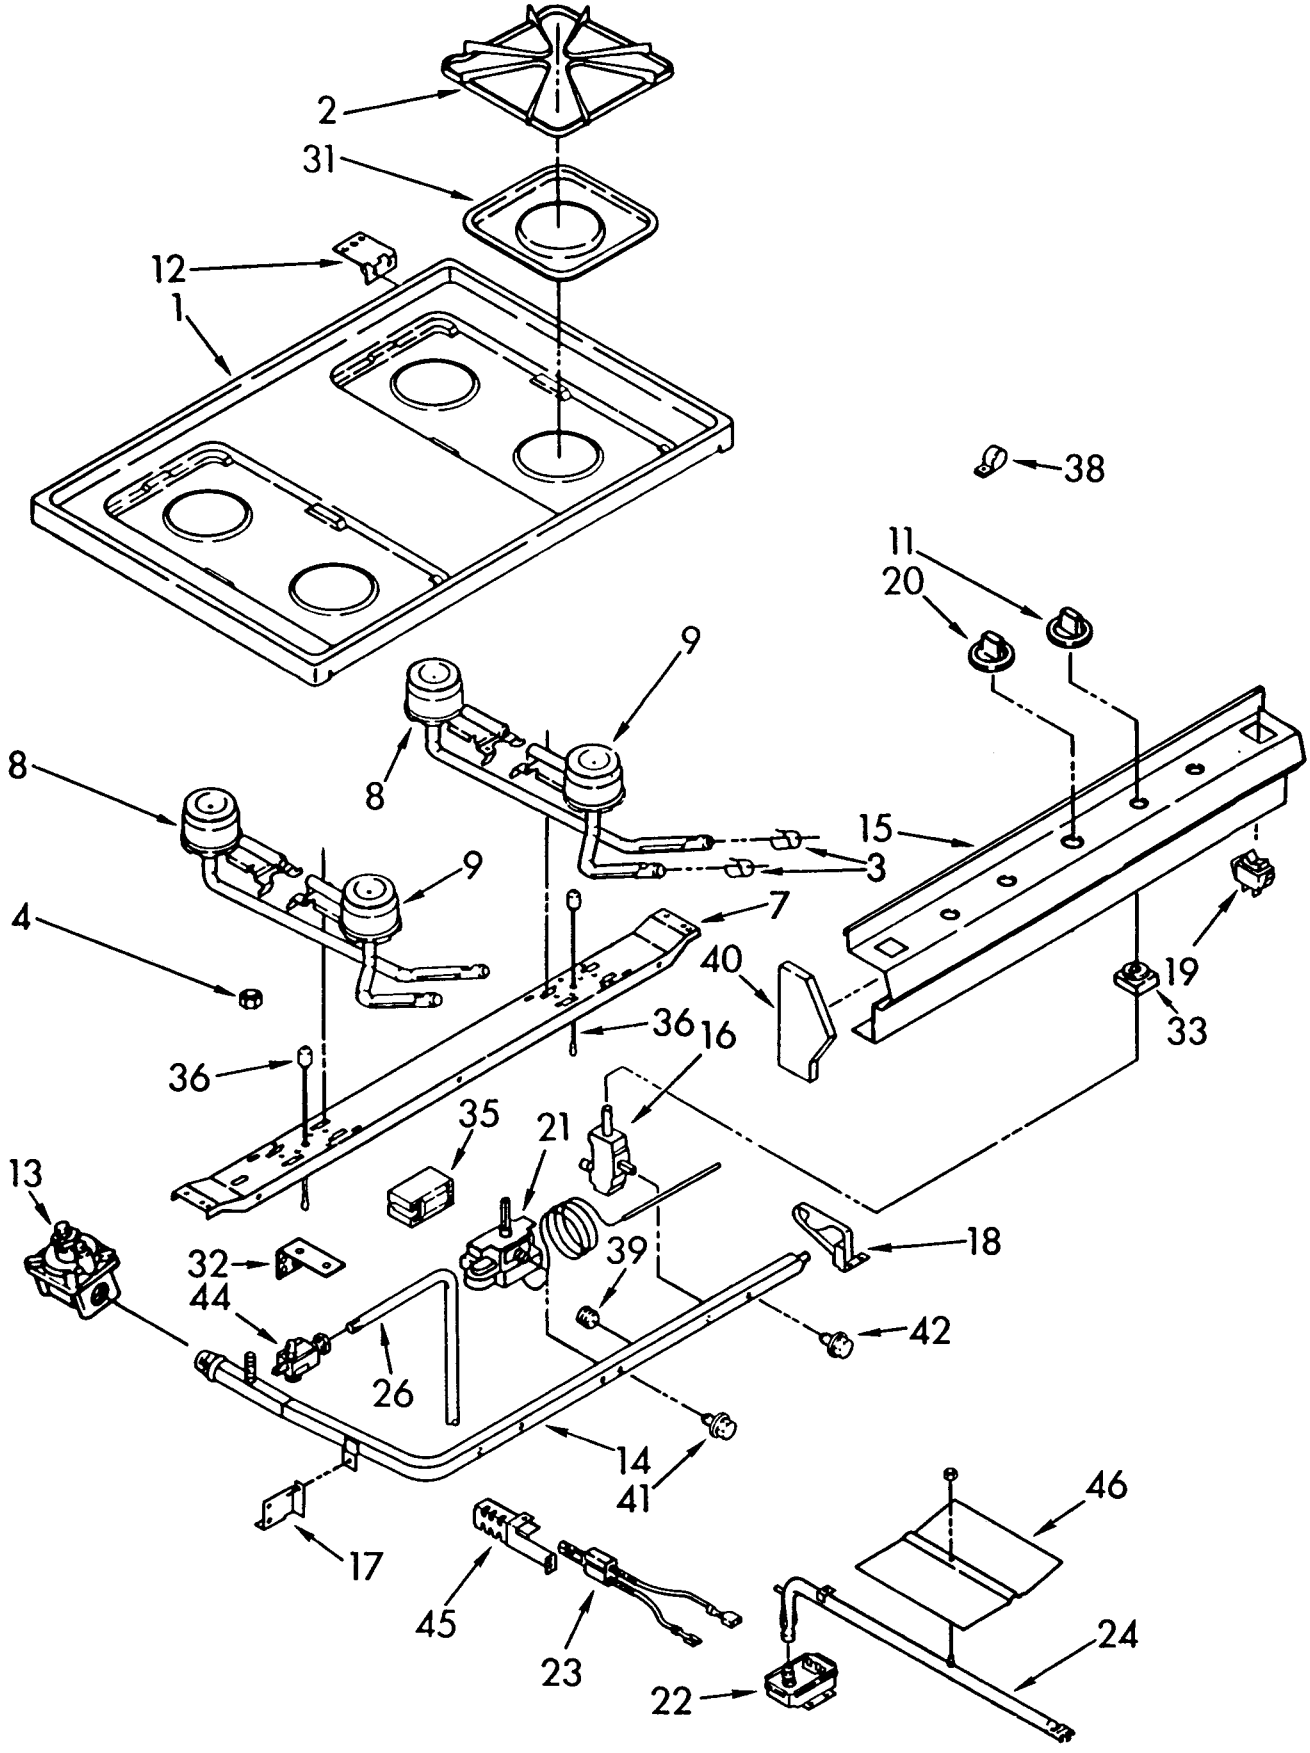

1		Cooktop
	4314891	White
	4314892	Almond
2	4320719	Grate (4)
3	4157074	Shutter, Air (4)
4	4157075	Nut, Hex
7	4157078	Support, Burner
	4315726	Tie, Wire
	4157121	Screw, 10-12 X 3/8 (4)
8	4157206	Burner, Rear (2)
	4157121	Screw, 10-12 X 3/8 (2)
9	4157205	Burner, Front (2)
	4157121	Screw, 10-12 X 3/8 (2)
11	4320580	Knob, Burner (4)
12	4314910	Hinge, Cooktop (2)
	4157121	Screw, 10-12 X 1/2 (4)
13	4320438	Regulator, Pressure
14	4320581	Manifold
	4157111	Screw, 10-12 X 1/2 (1)
15	4320732	Panel, Manifold
16	4314814	Valve, 90~ (4) (Includes Ill. N0. 42)
17	4320443	Support, Manifold (L.H.)
	4157111	Screw, 10-12 X 1/2 (3)
18	4320444	Support, Manifold (R.H.)
	4157111	Screw, 10-12 X 1/2 (2)
19	4315435	Switch, Oven Light
20	4320593	Knob, Thermostat
21	4320594	Thermostat (Includes Ill. No. 41)
22	4320442	Valve, Safety
	4320391	Screw, 10-12 X 1/2 (2)
23	4320445	Pilot
	4157121	Screw, 10-11 X 3/8 (1)
24	4320441	Burner, Oven
26	4320595	Tubing 3/8" (Manifold To Safety Valve)
31	4320757	Bowl, Chrome (4)
32	4157171	Plate, Spark Module
33	4157180	Switch, Valve
35	4320446	Module, Spark
36		Ignitor
	4320433	R.H.
	4320434	L.H.
38	4320760	Strain Relief
39	4157167	Plug, 1/8 Pipe
40		Endcap
	4320602	L.H.
	4320603	R.H.
41	4314816	Bolt, Thermostat Mounting (2)
42	4314817	Bolt, Valve Mounting
44	4157661	Valve, Shut Off
45	4320447	Shield, Ignitor
	4315391	Screw (2)
46	4320440	Spreader, Flame
	4157052	Nut

LITERATURE AND OPTIONAL PARTS

LITERATURE PARTS

LIT786768	Guide, Use & Care
LIT786735	Instuctions, Installation
LIT786302	Guide, Cooking
LIT4320761	List, Repair Parts